

H1

ALPHABETICAL INDEX

ALPHABETICAL INDEX

ALTERNATOR (Mitsubishi) (Emission control)	19A	BRAKE, rear	
AMMETER	23	Bridge TUBE, brake	
ANTENNA, radio	28B	BUMPER, front	
Air CLEANER (1.6L)	9	BUMPER, rear	
Air CLEANER (2L for "solex")	9A	Brake master	
Air CLEANER (2L "SU")	9B	Brake master	
Air PUMP with pulley	2B	Brake PEDAL	
		Brake PIPE	

PART NAME	GROUP NO.		PART NAME	GROUP NO.
CLEANER air (2L "SI")	9B		DIODE SET (2L)	19A
CLOCK (Option)	28B		DISC, brake rear	43
CLUTCH	29		DISTRIBUTOR (Hitachi)	18
Clutch DISC	29		Door LOCK	61A
Clutch master CYLINDER	45		Door PANEL	61
Clutch operating CYLINDER	46		E	
Clutch PEDAL	48			
Clutch release BEARING	29		Electrical parts MOUNTING	21
Clutch SWITCH	28		Electrical UNIT & SWITCH parts	22A
Companion FLANGE	37		EMBLEM, body side	55
CONDENSER, distributor	18		EMBLEM, hood	55
Connecting Rod (1.6L)	3		EMBLEM, radiator grille	54
Connecting Rod (2L)	3A		EMBLEM, rear panel	58
Console FITTING	56A		ENGINE (1.6L)	0
Console PANEL	56		ENGINE (2L)	0A
CONTACT SET	18		Engine GASKET kit (1.6L)	0
CONTROL, hood lock	55A		Engine GASKET kit (2L)	0A
Control LEVER, transmission	33		ENGINE MOUNTING	17
CONTROL, throttle	13A		Engine room HARNESS	22
CONTROL, transmission	33		Evaporative CONTROL	28
COVER, road wheel	41		Evaporative emission control DEVICE ...	10A
Cowl PANELS	55B		Exhaust emission CONTROL	2B
Cowl VENTILATOR	55B		Exhaust emission control DEVICE (U.S.A. & CANADA)	2B
CRANKSHAFT (1.6L)	3		Exhaust MANIFOLD (1.6L)	5
CRANKSHAFT (2L)	3A		Exhaust MANIFOLD (2L)	5A
CROSS MEMBER	52		Exhaust TUBE	14, 14A
Cross ROD hand brake	35		Exhaust VALVE (1.6L)	4
Cross ROD steering	50		Exhaust VALVE (2L)	4A
Cylinder BLOCK (1.6L)	1		F	
Cylinder BLOCK (2L)	1A			
CYLINDER, brake master (Single)	44		FAN (1.6L)	15
CYLINDER, brake master (Tandem)	44A		FAN (2L)	15A
CYLINDER, brake rear wheel	43		Fan BELT (1.6L)	15
CYLINDER, clutch master	45		Fan BELT (2L)	15A
CYLINDER, clutch operating	46		FENDER, front	55
CYLINDER, front brake	40		FENDER, rear	57A
CYLINDER, lock set	61B		Flasher UNIT	22A
D			FIELD COIL (1.6L)	20
Differential gear CASE	37		FIELD COIL (2L)	20A
DIODE SET (1.6L)	19			

PART NAME	GROUP NO.	PART NAME	GROUP NO.
FITTING, console	56A	GAUGE, fuel tank (Exc. EVAPO)	11
Flexible SHAFT, speedometer	23	GAUGE, oil level (1.6L)	1
FLOAT, carburetor (1.6L)	8	GAUGE, oil level (2L)	1A
FLOAT, carburetor (2L "solex")	8A	GAUGES, combined	23
FLOAT, carburetor (2L "SU")	8B	Gear CARRIER	37
Floor TRIMMING	57	GEAR hypoid	37
Flow guide VALVE	2B	GEAR, steering	49, 49A
FLYWHEEL (1.6L)	3	GEAR, steering (R.B. type)	49B
FLYWHEEL (2L)	3A	GEAR, transmission (1.6L) (Warner)	32A
FITTING, console	56A	GEAR, transmission (1.6L) (Servo synchromesh)	32
Fog LAMP	28	GEAR, transmission (2L) (Servo synchromesh)	32B
Fog & Reverse LAMP	28	GEAR, transmission (2L) (Warner)	32C
Fork ROD, transmission control	33	GLASS, back window	59
FRAME	62	GLASS, door ventilator	61
FRAME, windshield	56B	GLASS, door window	61
Front APRON	54	GLASS, windshield	56B
Front BRAKE	40	GLOVE BOX, floor	56A
Front BUMPER	54	GLOVE BOX instrument	56
Front FENDER	55	GRILLE, cowl top	55B
Front HUB	41	GRILLE, radiator	54
Front parking & Turn signal LAMP	26		
Front STABILIZER	39		
Front suspension LINK	38		
Fuel connector BRACKET KIT (1.6L)	8	H	
FUEL connector BRACKET KIT (2L "SU")	8B	Hand brake CONTROL	34
Fuel PIPING	11A	Hand brake LINKAGE	35
Fuel PUMP	10	Hard TOP	59
Fuel pump REPAIR KIT	10	HEATER (Option)	28A
Fuel STRAINER	10	Head LAMP	25
Fuel TANK (Exc. evapo)	11	Head REST	60C
Fuel TANK (Evapo)	10A	HEAD, rotor	18
FUSE	22A	Heater control CABLE	28A
Fuse BLOCK	22A	Heater MOTOR	28A
		High tension CABLE	21
G		HINGE, pillar	55
GASKET kit, engine (1.6L)	0	HOOD	55
GASKET kit, engine (2L)	0A	Hood LEDGE	65
GASKET kit, valve regrind (1.6L)	0	Hood LOCK	55A
GASKET kit, valve regrind (2L)	0A	HORN	22A
GAUGE, fuel tank (EVAPO)	10A	Horn BUTTON	51
		HOSE, radiator	16, 16A
		HUB, front	41

H4

PART NAME	GROUP NO.	PART NAME	GROUP NO.
Hypoid GEAR SET	37	M	
I		Magnetic SWITCH (1.6L)	20
IDLER, steering	50	Magnetic SWITCH (2L)	20A
Ignition COIL	21	MANIFOLD (1.6L)	5
Instrument HARNESS	22	MANIFOLD (2L)	5A
Instrument PANEL	56	Map LAMP	26B
INSULATOR, carburetor (1.6L)	5	MASK, radio aperture	28B
INSULATOR, carburetor (2L)	5A	MASTER CYLINDER brake (Single) ...	44
Intake MANIFOLD (1.6L)	5	MASTER CYLINDER, brake	
Intake MANIFOLD (2L)	5A	(Tandem)	44A
Intake VALVE (1.6L)	4	MASTER CYLINDER, clutch	45
Intake VALVE (2L)	4A	METER, tube & oil pressure GAUGE, ...	23
J		Model NO. PLATE	62
JACK set	61C	MODULATOR, thermal	2B
JOURNAL KIT	38	MOUNTING, electrical parts	21
K		MOUNTING, engine	17
Kit TOOL	61C	MOTOR, starter (1.6L)	20
Knuckle ARM	38	MOTOR, starter (2L)	20A
Knuckle SPINDLE	38	MUFFLER	14, 14A
L		N	
LAMP, rear	27, 27A	Neutral SWITCH	2B
Leaf SPRING, rear	53	O	
License LAMP	28	Oil FILLER (1.6L)	2
LID trunk	58	Oil FILTER (1.6L)	7
LINK, front suspension	38	Oil FILTER (2L)	7A
LINKAGE, accelerator (L drive)	13	Oil level GAUGE (1.6L)	1
LINKAGE, accelerator (R drive)	12	Oil level GAUGE (2L)	1A
LINKAGE, hand brake	35	Oil PAN (1.6L)	1
LINKAGE, steering	50	Oil PAN (2L)	1A
LOCK, door	61A	Oil PUMP (1.6L)	6
LOCK, glove box lid	55	Oil PUMP (2L)	6A
LOCK, steering	61B	Oil STRAINER (1.6L)	6
LOCK, trunk lid	58	Operating CYLINDER, clutch	46
		OUTSIDE, rear	57A
		Over flow TUBE (1.6L)	5
		OVERRIDE	54

JUNE, 1972

- 142 -

Printed in Japan

PART NAME	GROUP NO.	PART NAME	GROUP NO.
P		Rear SUSPENSION	53
PAD, disc brake	40	REFLECTOR	27
PAD, instrument	56A	REGULATOR	58
PAINT	62	REGULATOR, door window	61A
PANEL, cowl	55B	Remote CONTROL, door	61
PANEL, door	61	REPAIR KIT, brake master cylinder	
Parking & turn signal LAMP, front	26	(Single)	44
Parts SWITCH	22A	REPAIR KIT, brake master cylinder	
Pillar HINGE	55	(Tandem)	44A
PINION & CLUTCH, starter motor		REPAIR KIT, carburetor (1.6L)	8
(1.6L)	20	REPAIR KIT, clutch master cylinder ...	45
PINION & CLUTCH, starter motor		REPAIR KIT, clutch operating	
(2L)	20A	cylinder	46
PIPE, air gallery	2B	REPAIR KIT, fuel pump	10
PIPE, air injection	2B	Reservoir TANK, radiator	16, 16A
PIPING, brake (Single cylinder)	47	REPAIR KIT, wheel cylinder	43
PIPING, fuel	11A	Reverse LAMP	28
PISTON, engine (1.6L)	3	Ring GEAR, flywheel (1.6L)	3
PISTON, engine (2L)	3A	Ring GEAR, flywheel (2L)	3A
Piston RING (1.6L)	3	RIM, head lamp	54
Piston RING (2L)	3A	Road WHEEL	41
Propeller SHAFT	36	ROD, hood support	55A
PULLEY, alternator (1.6L)	19	Rocker COVER (1.6L)	2
PULLEY, alternator (2L)	19A	Rocker COVER (2L)	2A
PULLEY, crankshaft (1.6L)	3	Rocker SHAFT (1.6L)	4
PULLEY, crankshaft (2L)	3A	Room BACKSIDE view	59
Push ROD (1.6L)	4	ROTOR ass'y (1.6L)	19
R		ROTOR ass'y (2L)	19A
RADIO (Option)	28B	Rotor HEAD	18
RADIATOR	16, 16A	S	
Radiator GRILLE	54	Safety BAR	60C
Rear AXLE	42	Safety BELT	60C
Rear BRAKE	43	Sealed beam UNIT	25
Rear EXTENSION (1.6L)	31	SEAT	60, 60A, 60B
Rear EXTENSION (2L)	31A	SET CYLINDER (Waco type)	61B
Rear FENDER	57A	SET CYLINDER (Voss type)	61C
Rear LAMPS	27, 27A	SHAFT, crank (1.6L)	6
Rear PANEL	58	SHAFT, crank (2L)	3A
REAR, outside	58	SHAFT, flexible speedometer	23
		SHAFT, propeller	56

JUNE, 1972

- 143 -

Printed in Japan

H5

PART NAME	GROUP NO.	PART NAME	GROUP NO.
SHAFT, rear axle	42	T	
SHAFT, tachometer	23	TACHOMETER	23
SHAFT, transmission (1.6L)	32	TANK, fuel (Exc. evapo)	11
SHAFT, transmission (2L)	32A	Tail & stop LAMP, rear	27
SHAFT, trip reset	23	TANK, fuel	11
SHELL, steering column	51	THERMOSTAT (1.6L)	2
Shock ABSORBER, front	39	THERMOSTAT (2L)	2A
Shock ABSORBER, rear	53	Throttle CONTROL	13A
SHOE, rear brake	43	Throttle SHAFT (1.6L)	8
Side marker LAMP (U.S.A. & CANADA)	26, 26A	Throttle SHAFT (2L "solex")	8A
Side ROD	50	Throttle SHAFT (2L "SU")	8B
SILL, body	57A	Tonneau COVER	59
SMOG DEVICE	2B	TOOL KIT	61D
Soft TOP	59	Torque ROD	53
Spark PLUG	21	Torsion BAR, stabilizer	39
SPEEDOMETER	23	Trunk LID	58
Speedometer PINION (1.6L)	31	Transmission CASE (1.6L)	31
Speedometer PINION (2L)	31A	Transmission CASE (2L)	31A
SPINDLE, driving oil pump (1.6L)	6	Transmission CONTROL	33
SPINDLE, driving oil pump (2L)	6A	TRANSMISSION & GASKET Kit	30
SPINDLE, knuckle	38	Transmission SHAFT & GEAR (1.6L) (Servo synchromesh)	32
STABILIZER, front	39	Transmission SHAFT & GEAR (1.6L) (Warner)	32A
STATOR ass'y (1.6L)	19	Transmission SHAFT & GEAR (2L) (Servo synchromesh)	32B
STATOR ass'y (2L)	19A	Transmission SHAFT & GEAR (2L) (Warner)	32C
Starter MOTOR (1.6L)	20	TRIM, lock pillar	57
Starter MOTOR (2L)	20A	TRIM, wheel house	57
Steering GEAR	49, 49A	TRIMMING, cowl side	57
Steering GEAR (R.B. type)	49B	TRIMMING, console side	56A
Steering LOCK	61B	TRIMMING, door	61
Steering WHEEL	51	TRIMMING, floor	57
Stop & tail LAMP, rear	27	TRIMMING, parcel shelf	57
STRAINER (1.6L)	6	TRIMMING, sill panel	57
SUSPENSION, front (1)	38	TRIMMING, trunk floor	58
SUSPENSION, front (2)	39	TUBE, exhaust	14
SUSPENSION, rear	53	TUBE, evapo control	2B
SUNVISOR	56B	TUBE, evaporative emission control (Evapo)	10A
SWITCH	22A		
SWITCH, heater	28A		
SWITCH parts	22A		
SWITCH, reverse lamp (1.6L)	31		
SWITCH, reverse lamp (2L)	31A		

JUNE, 1972

- 144 -

Printed in Japan

PART NAME	GROUP NO.	PART NAME	GROUP NO.
Turn signal LAMP, rear	27		
Turn signal & parking LAMP, front	26		
V			
Vacuum CONTROL	18		
Valve LIFTER (1.6L)	4		
Valve regrind GASKET kit (1.6L)	0		
Valve regrind GASKET kit (2L)	0A		
Valve rocker COVER (2L)	2A		
VENTILATOR	55B		
VENTILATOR, door window	61		
Voltage REGULATOR	21		
W			
Waist PANEL	57A, 58		
WASHER, windshield	24A		
Water PUMP (1.6L)	15		
Water PUMP (2L)	15A		
WEIGHT, governor	18		
WHEEL, road	41		
WHEEL steering	51		
Windshield GLASS	56B		
Windshield WASHER	24A		
Windshield WIPER	24		
Wiper ARM	24		
Wiper BLADE	24		
Wiper MOTOR	24		
WIPER, windshield	24		
WIRE, accelerator (D drive)	13		
WIRE, accelerator (R drive)	12		
WIRE, choke control (L drive)	13		
WIRE, choke control (R drive)	12		
WIRE, throttle control	13A		
WIRING	22		
Withdrawal LEVER	29		

JUNE, 1972

- 145 -

Printed in Japan

Install the best!
GENUINE DATSUN PARTS



Engineering Department Parts Division



NISSAN MOTOR CO., LTD.



Tokyo, Japan